



How to use the Canon GL1 Digital Video Camera

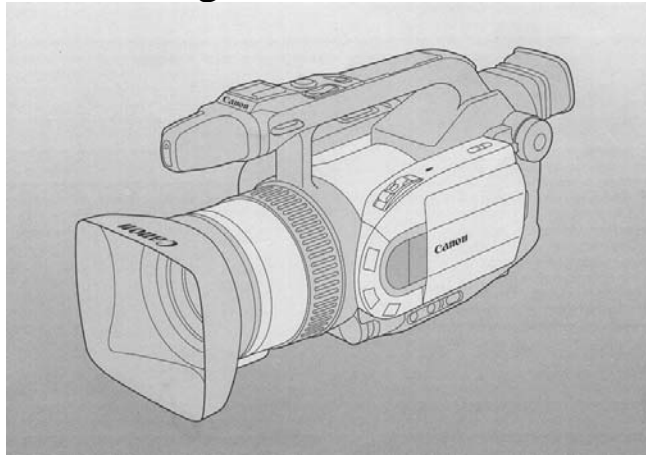

Connecting Power:


- Pull the eye piece out, then tilt it up
- Lineup power plug and slide it down until it clicks

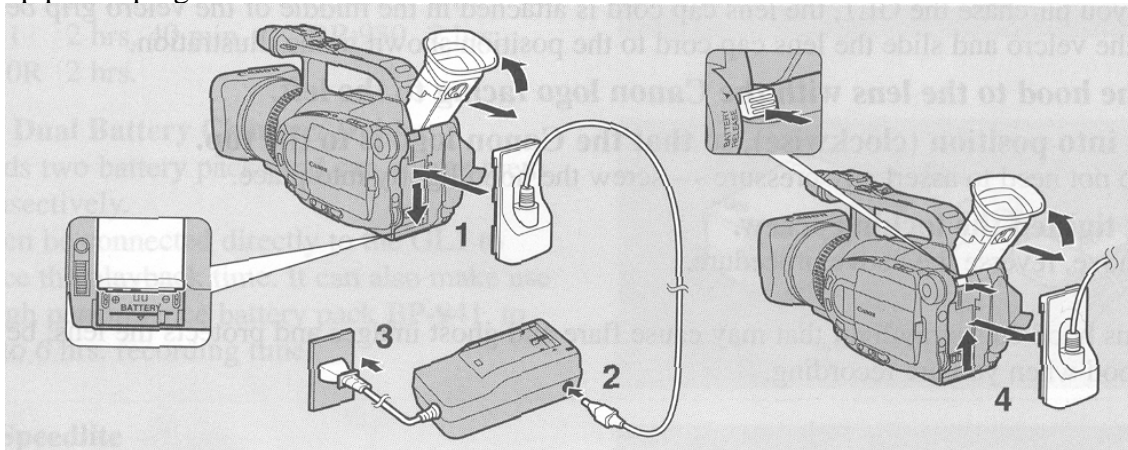

- To remove the plug, press the release button just under the eye piece, slid the plug up and out


Inserting a blank tape (power must be present but camera can be “Off”):

- Push the open lever toward the front of the camera and at the same time pull the cover out from the camera
- Push the green “Eject” button, the tape holder will come up and open
- Insert tape with the label facing away from the camera
- Push the tape holder in toward the camera but NOT DOWN
- The tape holder will go down on its own
- After the tape holder is down, close the cover

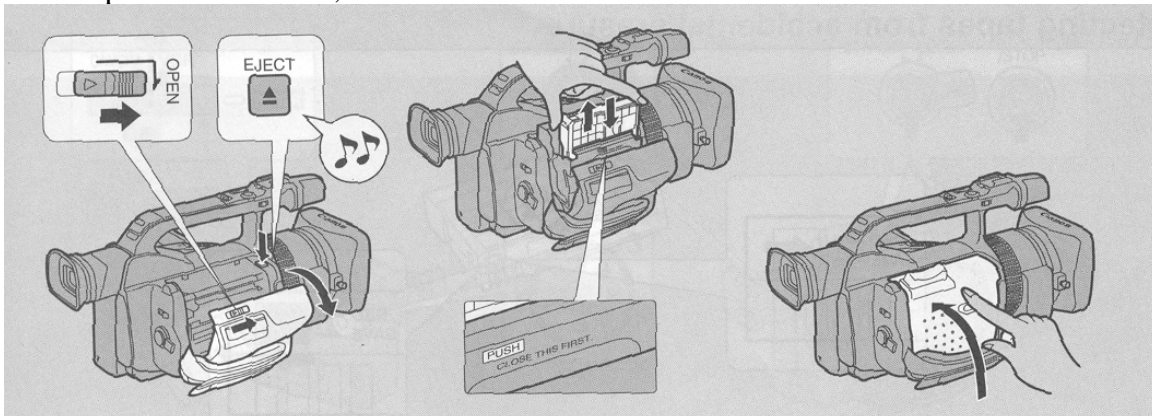


To record:

- Remove lens cap
- Open LCD monitor on the side
- Slide the power switch forward to “Camera” (see #1 below)
- Make sure camera is in “Standby” mode and not “Lock” mode, on the back of the camera (see #2 below)
- Check and make sure the camera is in easy mode, the knob on the LCD side near the back on the cameras should be on the empty rectangle (see #3 below)
- Press the big red record button on the back of the camera to start recording (see #4 below)
- The counter and the time remaining on tape, on the top left of the LCD will start
- You can use the zoom button (has a T and W on it) on the top of the camera near the back to zoom in and out during recording
- When you are done recording press the big red record button again
- Move the power switch back to “Off” and replace the lens cap

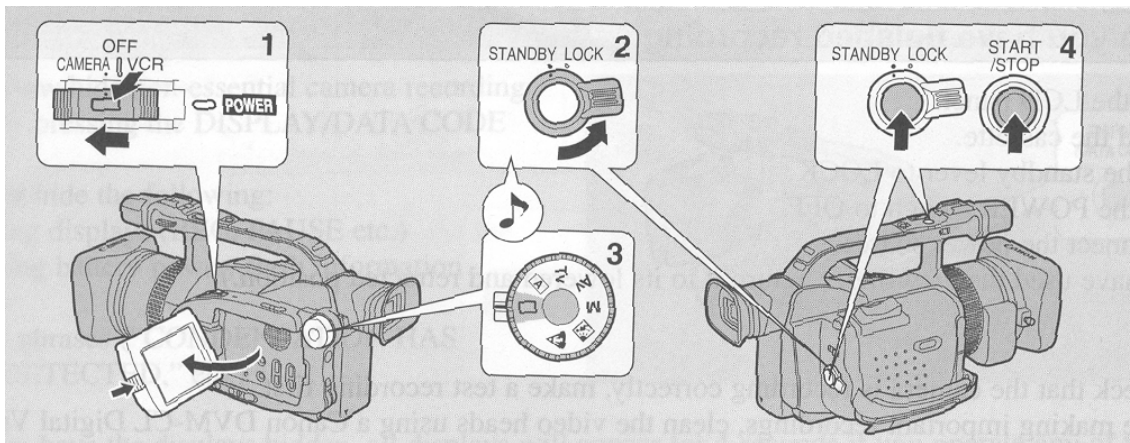


To eject the tape (power must be present but camera can be “Off”):

- Push the open lever up toward the front of the camera and at the same time pull the cover out from the camera
- Push the green “Eject” button, the tape holder will come up and open
- Remove the tape
- Push the tape holder in toward the camera but NOT DOWN
- The tape holder will go down on its own
- After the tape holder is down, close the cover

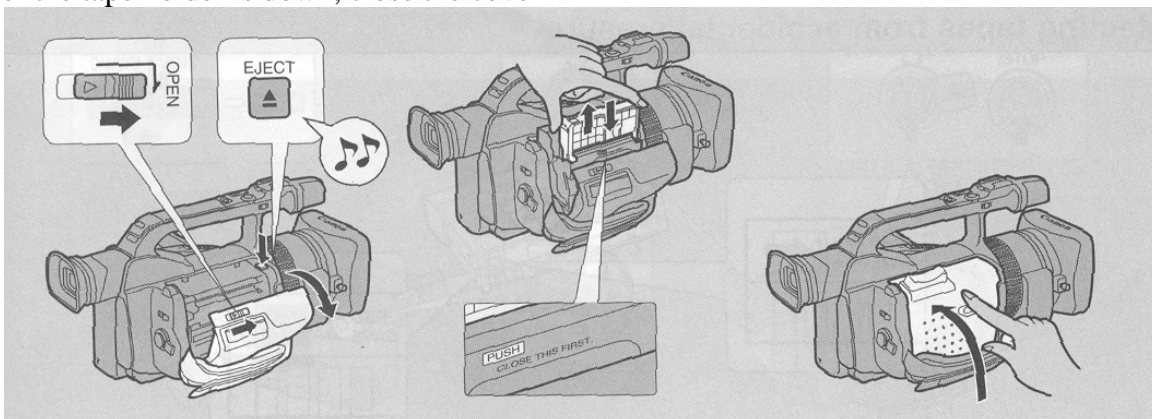


Hooking the camera up to a VCR for coping:

- Connect power to the camera (see above)
- Insert the tape you want to copy (see above)
- Connect the video out cable to the camera, under the flap on the back of the camera near the big red record button
- Connect the other end of the video out cable to the input on the VCR

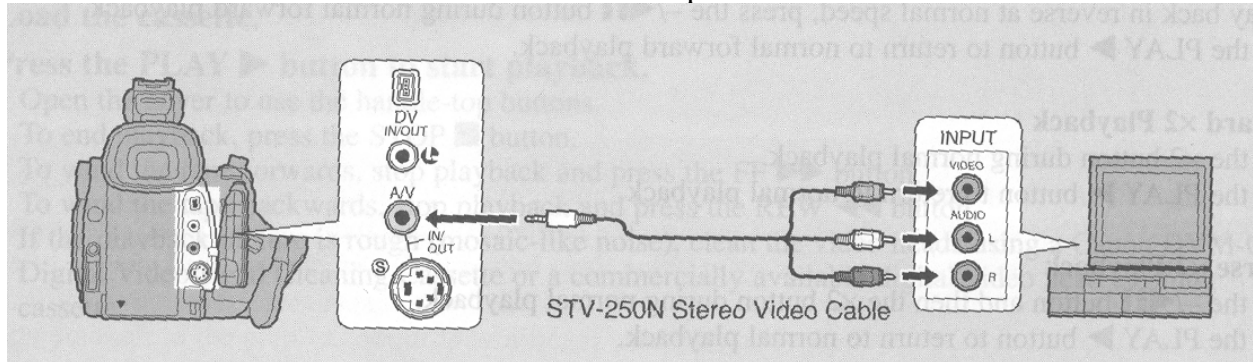

- Slide the power switch on the top of the camera back to “VCR”
- Turn on the VCR, insert blank VHS tape and set it to the input you plugged the camera into
- Open the flap on the top of the handle on the camera
- Press the “play” button on the camera and the “Record” button on the VCR

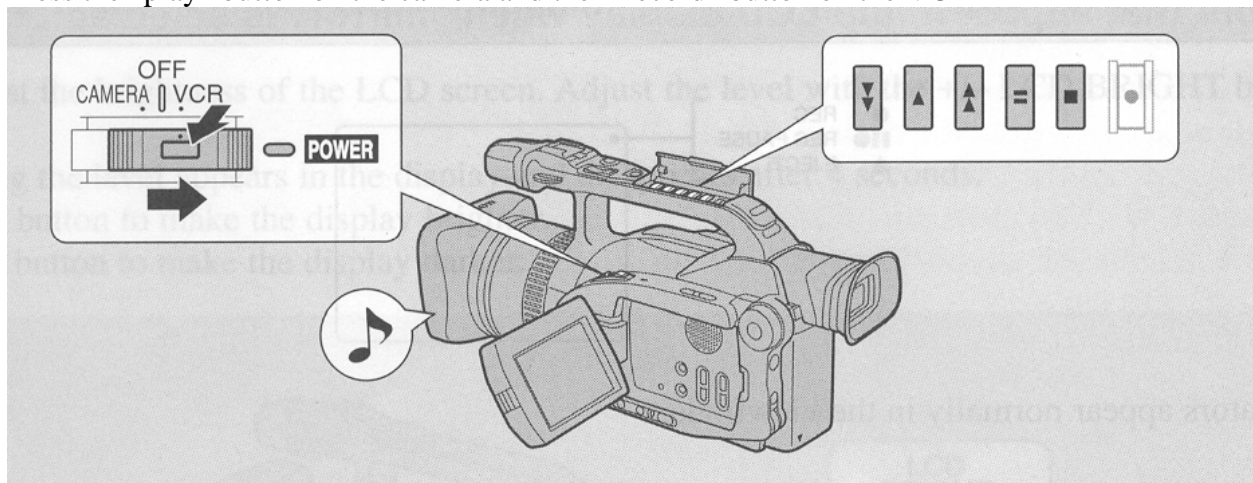

- When you are done press stop on both the camera and VCR, rewind the tapes
- Turn off the camera by moving the power switch to “Off”
- Eject the tape from the VCR and camera (see above)
- Turn off the VCR
- Disconnect the video out cable